

# Model FR-2 owner's manual <Version 1.10 supplement>

This supplement describes the enhanced/new functionality of the FR-2 version 1.10 software. Before using the FR-2 version 1.10, please read this supplement along with the original and supplementary manuals.

**(1) When recording a digital audio signal, you now have to set the [Fs (kHz)] and [QUANTIZATION] switches appropriately.**


With the FR-2 earlier version, when recording a digital audio signal, the FR-2 follows the FS information of the digital audio signal and you do not need to set the [Fs (kHz)] and [QUANTIZATION] switches (see page 55 of the owner's manual). With the FR-2 version 1.10, regardless of whether the digital audio signal contains the FS information or not, you have to set the [Fs (kHz)] and [QUANTIZATION] switches to match the digital signal. Make sure of this before you record a digital audio signal.

**(2) You can now protect a memory card mounted on the FR-2 in the USB mode.**

Using the newly added "Disk Protect" menu item, you can select whether or not protecting a memory card mounted on the FR-2 when transferring audio files between the FR-2 and a PC via USB connection. In other words, this menu item selects whether a PC can read/write data from/to a memory card or a PC can only read data.

This menu item is set to "On" by default, therefore, you can transfer audio data from the memory card to a PC but cannot transfer data from the PC to the card. This protects audio data in the memory card mounted on the FR-2 from being destroyed by inappropriate PC operation.

While the "Disk Protect" menu item is set to "On" (default), if you connect the FR-2 to a PC and execute the "USB Device Mode" menu item in the "USB Mode" menu of the MENU mode, "<Disk Protected>" is shown on the screen which shows USB connection condition. In other words, when "<Disk Protected>" is shown on this screen, the disk protection is enabled and the memory card is "Read only".

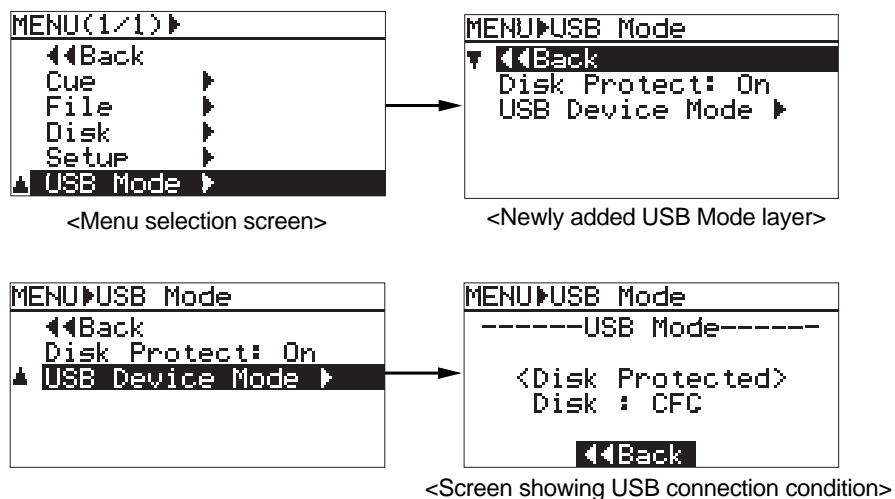

**<Note>:** With the addition of the protection function, the new USB Mode layer screen has been added as shown above. Therefore, note that the description on page 99 of the FR-2 owner's manual does not match the FR-2 version 1.10. As shown on the newly added layer screen above, "Disk Protect" menu item has been added.

You can enable or disable the protection whenever you like. See the next page for details about how to enable or disable the protection.


## Enabling/disabling the protection

The following procedure shows how to disable the protection from the default condition (the disk protection is enabled). The protection setting remains even after the power is turned off.

**<Note>**: You can enable or disable the protection whenever you like, however, we recommend using the FR-2 with the protection enabled.


- 1) **Press the [ENTER] key to enter the MENU mode.**

The display shows the first layer of the MENU mode screen.

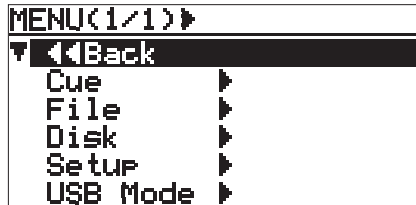



- 2) **Use the [MENU] dial to select "USB Mode" and press the [ENTER] key.**

The display now shows the USB Mode layer screen.

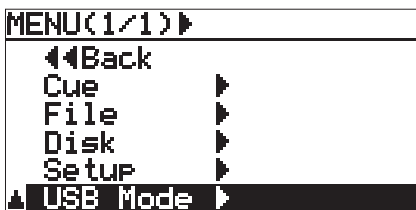



- 3) **Use the [MENU] dial to select "Disk Protect : \*\*" and press the [ENTER] key.**

The current option (by default, "On") flashes.

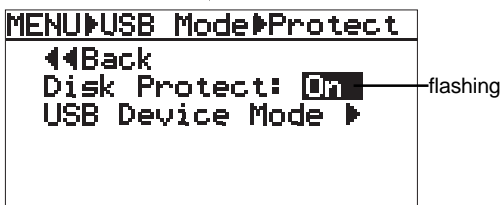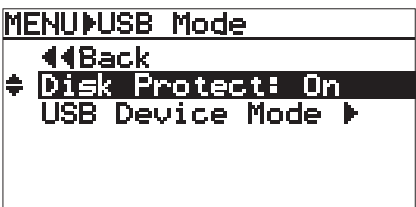

- 4) **To disable the protection, use the [MENU] dial to select "Off" and press the [ENTER] key.**

The protection is now disabled (released), while the display returns to the previous screen.

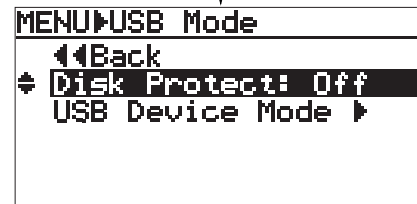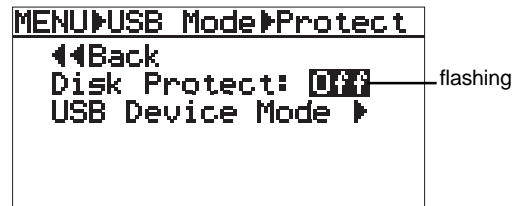

To execute USB connection after disabling the protection, select "USB Device Mode" on the screen above and press the [ENTER] key.

- 5) **To exit the MENU mode, press the [HOME] key.**

By selecting "<< Back" and pressing the [ENTER] key, the display returns to the previous screen. Therefore, you can also exit the MENU mode by repeating these operations.

**<Note>**: Before transfer audio file data between the FR-2 and a PC, read notes described on page 97 of the owner's manual.